


Instructions for “Removing” the Safety Cover

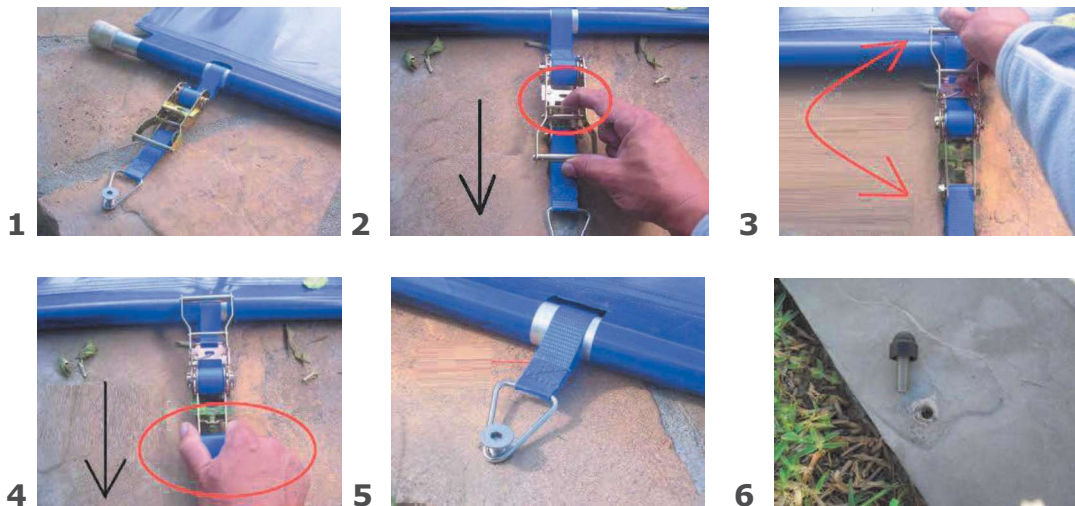

STEP 1

To open the cover, start at the side where the ratchets are positioned.

STEP 2

Pull the release-lever on the ratchet towards you (this releases the gear cog)

STEP 3

While keeping the release-lever pulled in, lift & open the release-lever 180 degrees. (You want to open the ratchet like a book)

STEP 4

Once the ratchet is open 180 degrees, you can pull the bottom section of the ratchet away from the cover. (this will unwind the strap from the ratchet creating slack). Its also easier just to push the end pole towards the swimming pool to unwind the strap from the shaft on the ratchet)

STEP 5

When there is sufficient slack on the cover, remove the triangular buckle from the stainless steel bolts on the side of the cover you want to open.

STEP 6

The anchor bolt screws into a socket that is secured into the coping/paving stone. This can be removed from the socket when the cover is removed and does require some grease for maintenance long term.

Removing the cover

You can now open the cover partly or completely, depending on the size of your cover you will require an extra person to assist you with this method. Each person take hold of the end pole and walk to the opposite side. (see picture below) The poles will not slide out seeing that they are built into the cover. When you get to the other side half the pool should be open. Collect the next end pole (being the middle pole from the cover) and walk to the same side to open the cover even more.